



Stride / Stride Dual

Weatherproof & Rechargeable Dog Training Collar



Note: Picture shown is Stride Dual



www.obedog.us

- ❖ Rechargeable Transmitter & Receiver Unit
- ❖ 3000 Identity Codes to prevent conflicts with other e-collars
- ❖ 100 Correction Levels of Vibration and Static Stimulation
- ❖ Locate or Sound Training for the impaired
- ❖ Power Saving Design Receiver Unit Sleep/Auto Protect Mode
- ❖ Weatherproof Receiver Unit
- ❖ Train to 2 Dogs with single transmitter
- ❖ Durable and Adjustable Nylon strap
- ❖ Fits Small, Medium and Large Dogs
- ❖ Range up to 330 Yards

Warning

Do not use this product if your dog displays aggressive behaviors towards other animals or humans. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer before use.

Caution

Please read and follow the instructions in this manual before using this product. Proper fitment of the collar is important to the comfort of your dog during training. A collar worn for too long or made too tight on your dog's neck may cause skin irritations ranging from redness to skin sores.

- ❖ Avoid leaving the **ObeDog Stride / Stride Dual** Collar on your dog for more than 12 hours per day.
- ❖ If possible reposition the receiver collar on your dog's neck every one to two hours.
- ❖ Check the fitment of the **ObeDog Stride / Stride Dual** Collar to prevent excessive pressure on your dog.
- ❖ When using a separate collar, do not cover and put pressure on the **ObeDog Stride / Stride** Collar.
- ❖ Wash your dog's neck area and the contacts of the receiver unit weekly with a damp cloth.
- ❖ Examine your dog's neck area daily for signs of a rash or sores.
- ❖ Should a rash or sore develops on your dog discontinue use of the collar until the skin has healed.
- ❖ If the condition persists beyond 48 hours, please consult your veterinarian for treatment.

Thank you for choosing **ObeDog Stride / Stride Dual** Rechargeable and Waterproof Training Collar. **ObeDog's** mission is to ensure your pet's safety by providing you the tools and techniques to successfully train your beloved pet.

Components -----	4
Key Definition -----	5
Features -----	6
How the ObeDog Stride / Stride Dual Training System Work -----	6
Setup/Operation Guide -----	7
Setup: Remote Transmitter -----	7
Operation: Remote Transmitter -----	7
Setup: Receiver Collar -----	7
Operation: Receiver Collar -----	8
Operation: Syncing Remote Transmitter and Receiver Collar -----	8
Operation: Testing Training Collar -----	8
Operation: Fitment Receiver Collar -----	9
General Tips and Training Guide -----	10
Troubleshooting -----	10
Frequently Asked Questions -----	11
Common Sizes and Weights of different dogs -----	11
Regular Maintenance -----	10

WARNING

Please charge both the remote transmitter and receiver collar for 30 – 45 minutes before first use!
Please charge the receiver collar as least once a month especially when it's not been in use to prevent damage to the rechargeable batteries.

Stride



Remote Transmitter



Nylon Strap



Charger



USB Charge Cable



Receiver Unit



Contact Points (x4)



Test Bulb Kit

Stride Dual



Remote Transmitter



Nylon Strap (x2)



Charger



USB Charge Cable



Receiver Unit (x2)



Contact Points (x8)



 
Test Bulb Kit

ObeDog Stride / Stride Dual

1. Antenna
2. LED Light
3. Indicator Light
4. LCD Display
5. UP/DOWN Button
6. LED Light Button
7. Channel Button
8. Command Button
9. Mode Button
10. Charging Port

LCD Icons

- 000 1-100 Level
- ⚡ Static Shock Mode
 - 🔊 Vibration Mode
 - 🔊 Beep Mode
 - 💡 LED Light Mode
 - 🔋 Low Battery Indicator
 - 1 Channel 1
 - 2 Channel 2

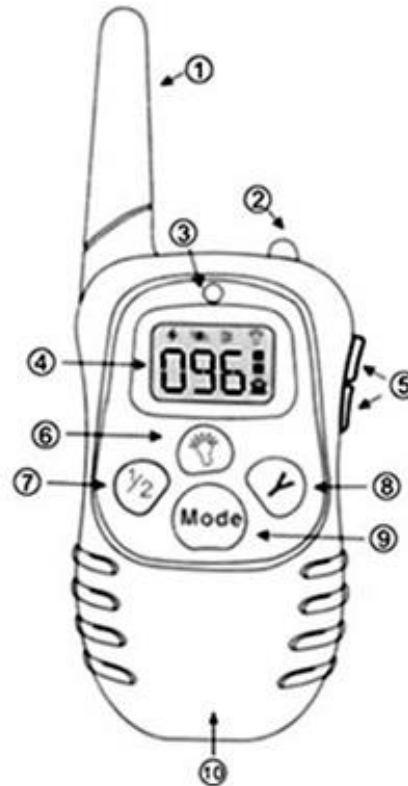

1. Antenna – Transmits signal to the Receiver Collar(s)
2. Led Light – Illuminates by pressing the LED light button
3. Indicator Light - This light will flash when instructions are sent to the Receiver Collar or when the transmitter is being charged
4. LCD Display
5. UP/DOWN Button - Intensity Level Button for Vibration and Static Shock Stimulation
6. LED Light Button – Activates the LED Light on the transmitter
7. Channel Button – Select which Receiver Collar to receive instructions
8. Command Button – Send commands to the Receiver Collar
9. Mode Button – Select between 4 modes (Vibration, Static Shock, Beep and Locate)
10. Charging Jack

LCD Icons

- A. Static Shock Mode: Receiver Collar will deliver a Static Shock at set level.
- B. Vibration Mode: The Receiver Collar will vibrate at set level.
- C. Beep Mode: The Receiver Collar will “Beep” to locate or call for your pet.
- D. Locate Mode: GREEN LED light on Receiver Collar will flash every 1 second to locate your pet.
- E. Low Battery Mode: Indicators when battery needs charging.
- F. Channel 1: Select to deliver instructions to Receiver Collar 1
- G. Channel 2: Select to deliver instructions to Receiver Collar 2

Features

1. Weatherproof Receiver Unit – will have no problems in the rain or wet weather
2. Range up to 330 Yards
3. 100 Correction levels of Vibration Stimulation
4. 100 Correction levels of Static Shock Stimulation (optional)
5. 3 Training Mode: Static Shock / Vibration / Sound
6. Locate Mode: LED Light – activates a flashing green LED light every second
7. Rechargeable Transmitter and Receiver Unit - Fully Recharged in 30 – 45 minutes
8. Power Saving Design LED Receiver Unit with Sleep/Auto Standby Modes
9. Power Saving Design Remote Transmitter goes to Sleep Mode after 2 minutes and Shutoff in 5 minutes
10. The system can be used with 1 or 2 Receiver Collars (**Stride Dual**)
11. Two pairs of metal prong (short / long) to suit dogs with different fur thickness

How the ObeDog Stride / Stride Dual Training System work?

The **ObeDog Stride / Stride Dual** Training Collar have been proven safe and effective for all pets. This system assists you in controlling and training your pet without a leash in a range of up to 330 yards. With the push of a button, the Remote Transmitter sends a signal and activates the Receiver Collar. By using the **ObeDog Stride / Stride Dual** Training Collar consistently, unwanted behavior that you dog exhibits can be corrected and many basic obedience commands can be taught with ease.

NOTE:

- ❖ The Remote Transmitter has a range up to 330 yards. Hold the remote transmitter horizontally away from your body to achieve maximum range. Terrain, weather, and transmissions from other radio devices can affect the range of your Remote Trainer.
- ❖ There are 100 levels of Vibration and Static Shock Stimulation. The strongest level can penetrate the hair of the pet within 6 mm thick. Do not shave the pet's neck as this may cause skin irritation.
- ❖ For comfort, safety and effectiveness of this product, please check the fitment of the **ObeDog Stride / Stride Dual** Collar frequently. If any skin irritation develops, discontinue the use of the collar for 48 hours. If the condition persists beyond 48 hours, please consult your veterinarian.
- ❖ Do not attach a leash to the Training Collar. You can use a separate non-metallic collar on your dog's neck to attach a leash.
- ❖ We suggest you use Vibration Training before starting the Static Shock Stimulation. When you follow this training method, your dog will learn that Static Shock Stimulation will come after Vibration. Hence, the vibration alone can effectively cure improper behaviors of your dog without Static Shock Stimulation.

ObeDog Stride / Stride Dual Training Collar Setup / Operation Guide

Setup: Remote Transmitter

Preparing the Remote Transmitter for First USE:

Charge the Remote Transmitter for approximately 30 – 45 minutes

Connect the charger to the charging jack and plug the charger into a standard outlet

 
The red LED should be lit which indicates charging

Once it is fully charged, the LED will turn off automatically

Low battery indicator: the symbol  will show up on the right downside of LCD screen when it needs to be recharged.

Operation: Remote Transmitter

1. To turn On/Off the remote transmitter simply hold the **Mode Button** for 5 seconds.
2. Access different modes by pressing the **Mode Button**. The LCD images will change between

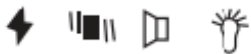

3. To select different Vibration or Static Shock Correction levels, press the **Up/Down Buttons** on the right side of the remote transmitter.
4. Press the **Channel Button** to select between 1 or 2 Receiver Collars. (Applicable to Dual Models with 2 Receiver Collars or if one choose to upgrade in the future)
5. The Remote Transmitter will go into **STANDBY MODE** if not operated for 2 minutes and will TURN OFF if not operated for 5 minutes.
6. In **STANDBY MODE**, press any button (except LED light button) to wake the transmitter.
7. If the transmitter is TURNED OFF, hold the **Mode Button** for 5 seconds to TURN ON the unit.

Setup: Receiver Collar

Preparing the Receiver Collar for First USE:

Charge the Receiver Collar for approximately 30 - 45 minutes

Open the rubber cover and connect the charger connector into the charging hole

Plug the charger into a standard outlet

The red LED should be flashing which indicates charging is in progress

Once it is fully charged, the LED will turn off automatically



Receiver Collar

1. Once Turn ON, a beep will sound to notify you it is active.
2. The LED will blink once every 5 seconds to signal it is active.
3. The Receiver Collar enters Standby Mode if no activity is detected for 20 second. Any movement detected will automatically Wake it up.
4. When a recharge is required, the receiver collar will beep for 20 seconds.

Note: When you turn the receiver ON, if the receiver collar beeps for 20 seconds, you need to recharge it before using.

Syncing Remote Transmitter and Receiver Collar

1. Turn on the Remote Transmitter by holding the **Mode Button** for 5 seconds.
2. Select channel 1 or 2 to sync each Receiver Collar.
3. Press the RESET button on the Receiver to enter encoding mode for 5 seconds.
4. When you hear a beep from the Receiver Collar, press **Command Button** on the Remote Transmitter immediately.
5. Once synced properly, you will hear a beep to confirm successful pairing.

Note: If you fail to hear a second beep confirming sync from the Receiver Collar, you need to re-sync it. Repeat Steps 3-5 above.

Testing

Static Shock Test

- ❖ Secure the included Test Bulb Kit and wind its metal wire on the Receiver Collar's Contact Points.
- ❖ Press **Mode Button** on the Remote Transmitter and select **Shock Mode**.
- ❖ Be sure the level setting is not set to zero.
- ❖ Press **Command Button** and the test bulb will light up indicating the shock feature works.

Vibration Test

- ❖ Press **Mode Button** on the Remote Transmitter and select Vibration Mode.
- ❖ Be sure the level setting is not set to zero.
- ❖ Press **Command Button**, the Receiver will vibrate indicating the Vibration feature works.



ObeDog Stride / Stride Dual Training Collar: 3.7V 180mAh Lip

Beep Test


- ❖ Press Mode Button on the Remote Transmitter and select Beep Mode.
- ❖ Press Command button, the Receiver will beep indicating the Beep feature works.
- ❖ LED Light Test
- ❖ Press Mode Button on the Remote Transmitter and select LED Light Mode.
- ❖ Press Command button, the LED on the Transmitter will flash indicating the LED Light works.



Fitment

IMPORTANT: Proper fitment and placement of the **ObeDog Stride / Stride Dual** Collar is important for effective training. The fitment must be snug but yet loose enough to allow one finger space between the strap and your dog's neck. The Contact Points must have direct contact with your pet's skin on the underside of his neck.

To ensure a proper fit, please follow these steps:

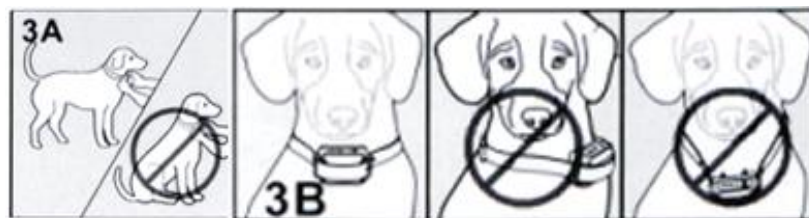

1. Have your pet standing comfortably (3A).
2. Center the Contact Points beneath your dog's neck and touching the skin (3B). If your pet has a long or thick coat, please use the longer Contact Points, we enclosed 2 sets Contact Points both short ones and longer ones.
3. The Collar should fit snugly, yet loose enough to allow one finger space between the strap and your dog's neck.
4. Allow your pet to wear the collar for several minutes then recheck the fitment again as your pet becomes more comfortable with the Collar.

General Tips and Training Guide


- ❖ The **ObeDog Stride / Stride Dual** Receiver Collar is not designed to be worn constantly. We recommend the Collar not be worn for more than 12 hours out of a 24-hour period.
- ❖ Most dogs will feel uncomfortable at first when wearing the collar for the first time. Don't use any commands until your dog has gotten used to the collar.
- ❖ Eliminate one improper behavior or teach one obedience command at a time. If you move too quickly with training, your dog may become confused.
- ❖ Be consistent. Give your dog the same stimulation for each improper behavior.
- ❖ We suggest you use Vibration Stimulation before starting the Static Shock Stimulation. When you follow this training method, your dog will learn that Static Shock Stimulation might come after Vibration Stimulation. Hence, the Vibration Stimulation alone can effectively cure improper behaviors of your dog without using Static Shock Stimulation.
- ❖ Do not over-correct. Use as little stimulation as possible to train your dog.
- ❖ Setting up a scenario in a training session can dramatically improve your chances of success.
- ❖ Should your dog reacts to the training by hiding or reacting fearfully, redirect his attention to a simple and appropriate command such as "Sit" to calm him down.

Troubleshooting

My ObeDog Stride / Stride Dual System is not working?

- ❖ Charge the Transmitter and Receiver Collar for approximately 30 – 45 minutes individually first.
- ❖ Make sure the Transmitter is turned ON by holding the Mode Button for 5 seconds.
- ❖ Check the levels of Vibration or Static Shock stimulation.
- ❖ Intensity levels has to be higher than "0" in order for Vibration and Static Shock Stimulation to work.
- ❖ Make sure the Receiver Collar has enough power to operate.
- ❖ Restart the Receiver collar by pressing the ON/OFF button.
- ❖ Make sure the Contact Points are placed snugly against your pet's skin.
- ❖ If all of above does not work, you can re-sync the remote Transmitter and Receiver Collar. (Refer "Syncing Remote Transmitter and Receiver Collar" of Setup/Operation Guide)

My ObeDog Remote Transmitter does not work

- ❖ Check if Transmitter is low on battery, the symbol  will show up on the right down side of LCD screen.
- ❖ Hold the Remote Transmitter for 5 seconds to turn on it.
- ❖ Remote Transmitter will automatically goes into Standby Mode if no instruction is detected within 10 seconds. Press any button except LED Light button to re-activate the Remote Transmitter.

My ObeDog Receiver Collar starts to beep for 20 seconds when I turn it on

- ❖ The Receiver Collar will beep for 20 seconds on Low battery status. Charge it for approximately 30 – 45 minutes and the beeping sound will go away when it's fully charged.

Regular Maintenance

- ❖ Check Contact Points for tightness weekly
- ❖ Clean Contact Points with alcohol weekly
- ❖ Check your dog's neck for irritation weekly
- ❖ Charge both the Transmitter and Receiver collar as least once a month especially when it's not in use to prevent damage to the rechargeable batteries.

Once my pet is trained, does he have to continue wearing the Receiver Collar?

You might have to reinforce training with the Receive Collar from time to time.

Can I upgrade the ObeDog Stride System to the Stride Dual for two dogs?

Yes, you can simply purchase an additional Stride Receiver thru our website or Amazon directly.

How long can I continuously deliver Vibration or Static Shock to my pet?

The maximum amount of time you can deliver Vibration or Static Shock Stimulation to your dog continuously is 10 seconds. After 10 seconds, the Remote Transmitter will time-out and the Vibration or Static Shock must be released and pressed again.

Is the ObeDog Stride / Stride Dual Receiver Collar waterproof?

No, the ObeDog Stride / Stride Dual Receiver(s) is weatherproof, element proof against rain or snow. Receiver(s) should NOT be submerged in water.

What do I do if my dog’s neck becomes red and irritated?

Discontinue use of the product immediately for 48 hours. If the condition persists beyond 48 hours, please consult your veterinarian. You may resume the use of the product and training once the skin is healed.

Can I attach a leash to the Receive Collar?

No, this can result in pulling the Contact Points too tightly against your dog’s neck. Use a separate collar placed above the Receiver Collar.

When should I recharge the Transmitter and Receiver Unit?

Remote Transmitter: The Battery symbol  will appear on the right down side of LCD screen.

Receiver Unit: A beeping sound for 20 seconds when you turn on the Receiver Unit.

How long can I leave Receiver Collar on my dog?

The Collar is not designed to be worn continuously. We recommend the Collar not be worn for more than 12 hours during a 24-hour period.

How long should my training session for my pet be?

Training sessions should be kept short and positive. Each recommended session should last around 10-15 minutes.

Common Sizes and Weight of Different Dogs				
Size	Neck (CM)	Chest (CM)	Weight (LB)	Type
Mini	20 - 22	25 - 30	9	Chihuahua, Yorkshire Terrier
Small	20 - 24	29 - 36	9 - 15	Chihuahua, Yorkshire Terrier, Pomeranian
Medium	23 - 28	35 - 42	15 - 35	Cocker Spaniel, Maltese Dog, Shih Tzu, Poodle, Pekingese
Large	27 - 31	41 - 47	35 - 55	Golden Retriever, Boxer
Large	30 - 34	46 - 53	35 - 55	Schnauzer, Labrador Retriever
Large	33 - 37	52 - 59	35 - 55	Bull Terrier, Basset Hound
Huge	43 - 48	76 - 84	55 - 120	German Shepherd, Husky
Huge	47 - 52	88 - 97	55 - 120	Rottweiler, Pitbull
Huge	52 - 62	92 - 100	55 - 120	Great Dane, Old English Sheepdog